


# JCHR35W1A/2A


## 6-channel LED Remote Controller User Manual

### 01 Product Info

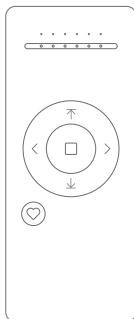

JCHR35W1A

Hand-held 6-channel LED remote controller

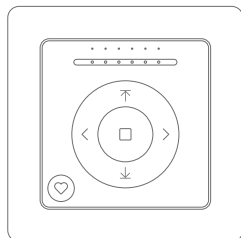


JCHR35W2A

Wall-mounted 6-channel LED remote controller


### 02 Buttons

#### a. Front

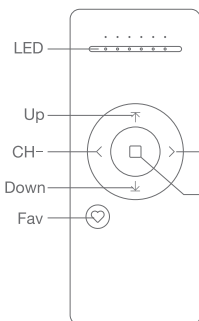

JCHR35W1A


Hand-held 6-channel LED remote controller

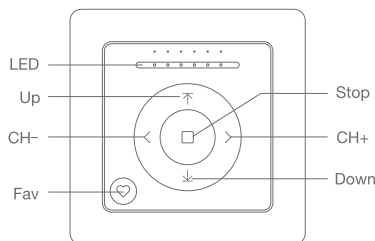

JCHR35W2A


Wall-mounted 6-channel LED remote controller

#### b. Back

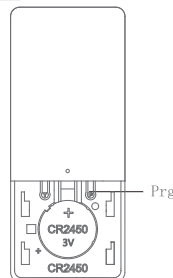

JCHR35W1A

Hand-held 6-channel LED remote controller

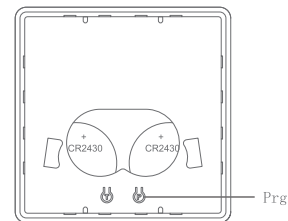

JCHR35W2A

Wall-mounted 6-channel LED remote controller

### 03 Models & Parameters (more info please refer to the nameplate)

Electrical Specification	Standard	
Battery Type	Hand-held: CR2450*3V*1	Wall-mounted: CR2430*3V*2
Working Temperature	-10°C-50°C	
Radio Frequency	433.92M±100KHz	
Transmit Distance	>=30m indoor	

### 04 Caution!



- 1.The transmitter should not be exposed to moisture or impact, so as not to affect its life.
- 2.During use, when the remote control distance is significantly shorter or less sensitive, please check whether the battery needs to be replaced.
- 3.When the battery voltage is too low, the orange LED will flicker during operation.
- 4.Please properly dispose of used batteries according to the local garbage classification and recycling policy.

### 05 Instructions

#### a.Prohibit Dual-key Operation

- ① Prgx10s LED flickers x3 Dual-key operation prohibit

- ② Repeat the above, dual-key operation activated

Note: When dual-key operation prohibited, these programming setting functions are not allowed.

#### b.Number of Channels Setting

- Fav&CH+ x3s LED flickers x3 Short press Increase or decrease channel numbers Short press
- Flickers thrice -- OK

Note: When all LEDs are lit, that is channel 0 ( All channels move together ).

c. For other operations, please refer to the motor operation instruction